

Release note

for the dac8 PRO v1.6 firmware





Introduction

This document provides comprehensive information related to the v1.6 firmware update package for the dac8 PRO, including a changelog and step-by-step installation guide.

If you are coming from a firmware version prior to v1.5, please update to v1.5 first by following steps in the [Release note for the dac8 PRO v1.5 firmware](#).

Changelog

Bugfixes

- removed clicks during transitions between PCM, DSD and DoP
- fixed compatibility issues with Linux and some Linux-based devices (streamers, Raspberry Pi) that manifested as a flashing playback indicator
- fixed a bug causing distortion of 192 kHz playback from AES/EBU
- resolved firmware hang-ups when switching from USB/AES to PureUSB mode

New functions

- AES/EBU inputs are now compatible with DSD over PCM. That means dac8 PRO is able to receive signals from SACD players and other hardware that transmits DoP.
- the AES/EBU output is also able to transmit DoP signal


Known limitations

- direct playback of 6-channel DSD (e.g., 5.1) is not supported in Linux (including hardware running Linux such as many streamers, Raspberry Pi, and other single-board computers). This limitation exists because the Linux audio driver cannot extend the number of channels to match the DAC, as drivers for other operating systems can. The player must change the number of channels to 8.

Update installation

Windows

- 1) Download and install the [v5.68.0 Okto Research ASIO driver](#) if you haven't already
- 2) Download the update package from the following link: [dac8pro_fw_16](#) and extract the ZIP archive file
- 3) Open folder "dac8pro_fw_16" and Run the Okto Research DFU utility
- 4) Press "Browse" and select the file "dac8pro_fw_16_windows.bin".
- 5) Press "Start" and wait until the process finishes. After that, please wait one more minute for the front panel microcontroller to update. Once completed, you will be able to turn the unit on with the center dial.

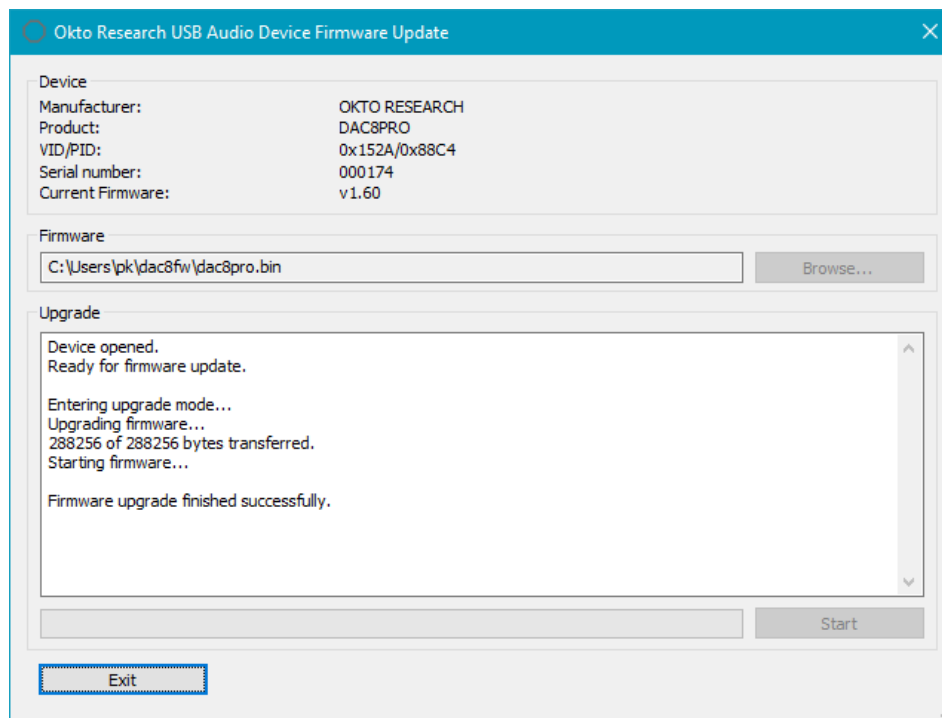



Linux

The update package is available for arm32, arm64 and x86-64 architecture.

- 1) Download the firmware update package from [dac8pro fw 16](#)
- 2) Extract file "dac8 pro_fw_16_linux_version" to your home folder, where "version" will correspond one of the three variants available for different platforms
- 3) Open terminal and install a generic USB library by running command "sudo apt-get install libusb-1.0-0-dev"
- 4) Run command "chmod 777 ./dac8pro_fw_16_linux_version" into the terminal and run it to change permissions for the file
- 5) Run command "sudo ./dac8pro_fw_16_linux_version"
- 6) Verify the successful completion by turning on the unit with a rotary control press, which should bring you to the updated main screen
- 7) Press and hold the rotary control to turn the unit off and then unplug it from mains for 5 or more seconds. After power cycling, the unit is ready for use. Remote control will need to be paired again and all the menu settings will need to be manually restored.

Footnote

Please note that all settings, including remote control codes, will be lost during the update process, and you will need to pair your remote again.

We have made every effort to ensure the v1.6 firmware is free of bugs. If you encounter any issues, please contact us at info@oktoresearch.com.

Warning: If there is a loss of power or USB connection during the update process, your unit will revert to the original factory version of the firmware. If your unit came with a pre-1.5 version, you will need to update to v1.5 first in order to access newer firmware releases.